## Basic Procedure for installing a Grinder Pump System for One and Two Family Dwellings (Residential)



	Complete the Supplementary Plumbi to Sewer.	ng Permit Application - Residential Grinder Pump as Primary Connection
	by E-One Sewer Systems that are app	also need to be an approved type. Currently, there are two types of pumps proved: the GP2010 and the DH071. These are sold by WASCON in
	Livingston, TN.	
		t that a grinder pump is to be installed and sign an updated sewer service Pump agreement. (If the installation is associated with a sewer extension
	project, different procedures may app by Utility Billing.	oly – Highgate, Meadowgreen, etc.) Pay the connection fees as determined
	Obtain a Plumbing and an Electrical	permit from the Codes Department. The plumbing permit must be
	obtained before or at the same time as the Electrical permit. Bring a plot plan with the installation location of	
	the grinder pump marked. The pump location will need to be sited so that any odors from the grinder pump will not be a nuisance to adjacent properties, or to the primary structure.	
		call for inspections before covering the pump and sewer lines. Access to be coordinated to check the electrical connections and the interior alarm occupied house unaccompanied.
	For existing houses with septic systems, the septic tank will have to be abandoned per County guidelines in conjunction with installing the grinder pump.	
	Point of contact at City of Franklin:	Chris Bridgewater 550-6633 or <a href="mailto:chris.bridgewater@franklintn.gov">chris.bridgewater@franklintn.gov</a> .
W	ebsite links:	
•	City of Franklin	www.franklintn.gov
•	Franklin Municipal Code	www.municode.com/resources/gateway.asp?pid=14633&sid=42
•	Wmsn. County Sewage Disposal	www.williamsoncounty-tn.gov/index.aspx?NID=126
•	E/One Sewer Systems	www.eone.com/sewer_systems/intro/index.htm

www.wasconinc.com

WASCON

<sup>\*</sup> Grinder pump installation is regulated by Franklin Municipal Code, the International Residential Code 2003 with 2004 Supplements, and the manufacturer's installation instructions.